




Upgrading Flair Motion Control Software v6

File structure

The default file structure of Flair 6 is as follows C:\Flair\Flair6\Flair.exe

As you can see below you can have several versions of Flair within C:\Flair\ however make sure you know what shortcut of Flair.exe you are running.

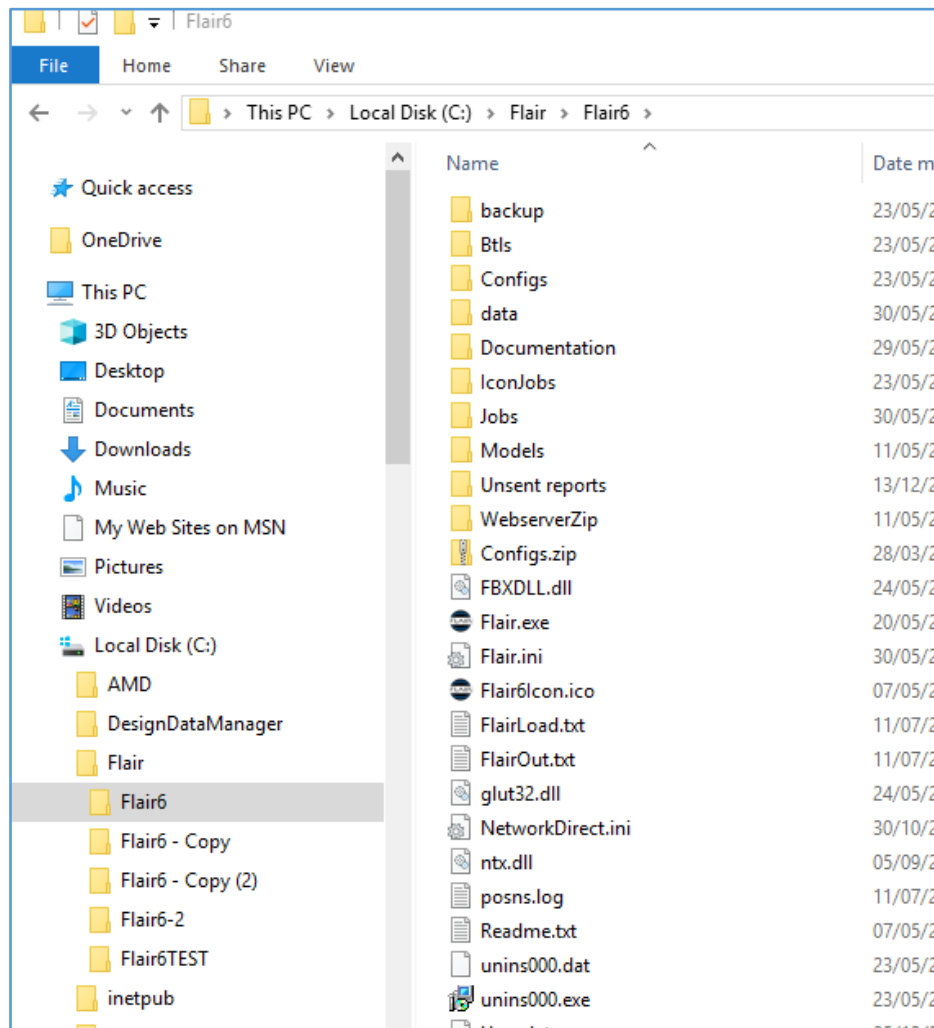


Caution:

Therefore, before updating Flair always:


- Back up your Flair folder to another drive such as a file server or USB stick
- Copy C:\Flair\Flair6\ to Flair6-OLD or similar. That way you can switch back quickly to your old version if you need to.

Installation


1. Run the installer
2. When prompted for the location leave it as it is default and select yes – you will receive a message that this folder exists. Select **Yes** to go ahead (you copied the folder earlier so you have a back-up).

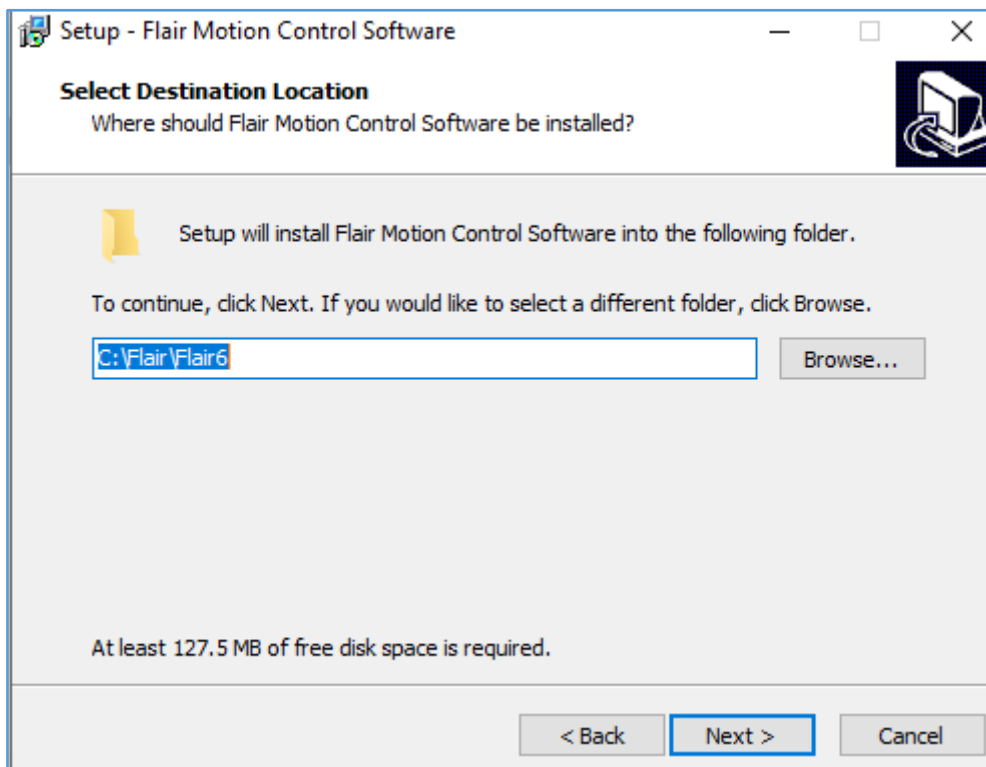

3. When asked for “NEW INSTALLATION” use the drop-down arrow to change it to UPGRADE

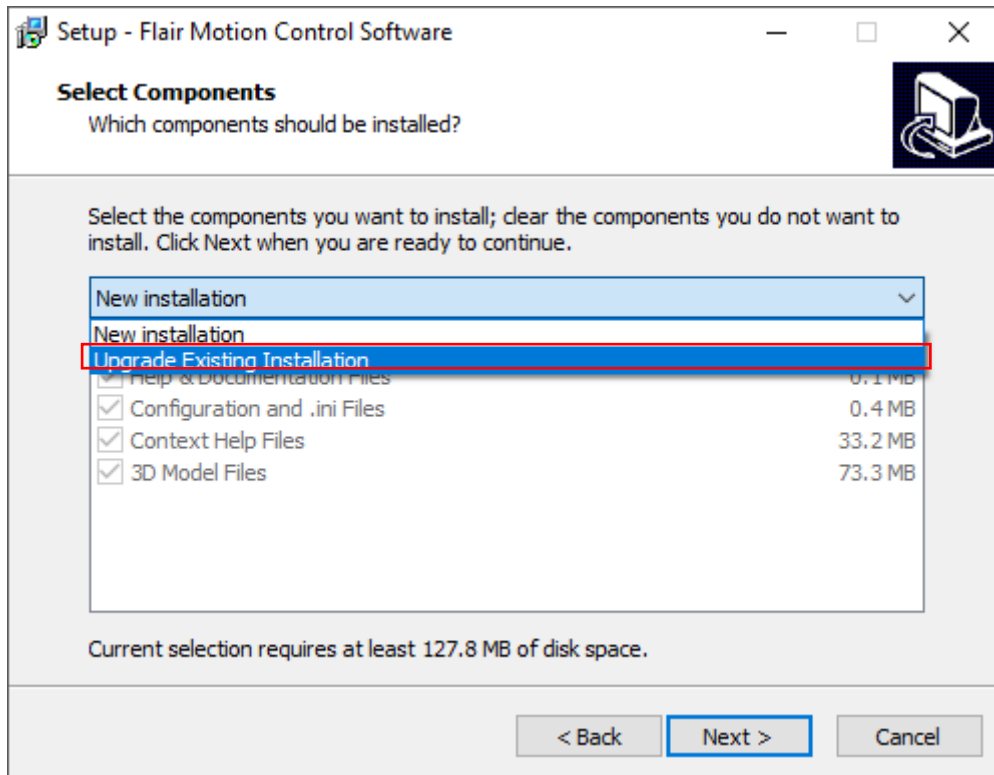

4. If required, go to **Flair > Help > License** and send a license request

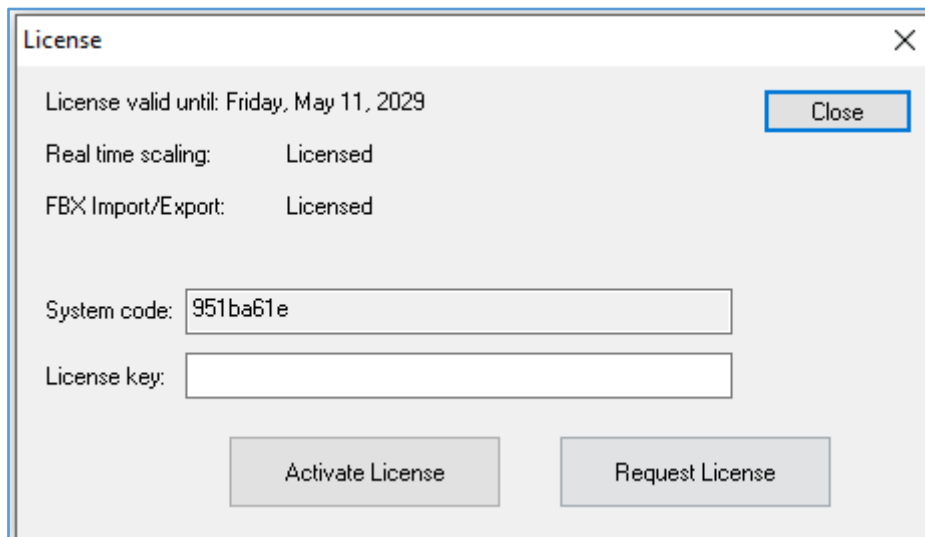

5. When received, enter the new license and click **Activate** (Sometimes Flair wants to restart after you applied the license and then after restarting you will need to apply the license again and then it will be active)
6. Set up a shortcut on the desktop or other convenient location if you like and if you do have several versions of Flair on your PC ensure that they are properly labelled so that you always know the right shortcut to run.

